FUEL MANAGEMENT GUIDELINES			
Firewise Environment	Requirements	Recommendations	Comments
Zone 1			
0-10 feet from structure	*Remove all pine needles & flammable ground materials. *Remove all ladder fuels. *Min 10 feet between crowns of native trees or "clumps" (max 4 trees/clump). *Prune trees extending over eave of roof. *Remove branches within 15' of chimney. *Use only approved decking materials. *Use non-flammable landscape material, (ex: no railroad ties, wood fencing, etc). *Prune limbs to min 8 feet from ground or 25% of tree height, which ever is less.	*Minimize flammable vegetation in this zone. *Maintain non-combustible ground material 2-3 feet around structure, (Planting beds, rock gardens, gravel or bare soil). *Keep roof and rain-gutters clear of needles and leaves.	Wildfire is the #1 fire threat to our area. The goal in this zone is to reduce creeping ground fire. What is done now will greatly enhance structure survivability and firefighter safety.
Zone 2			
10-50 feet from structure Zone 3	*Remove pine needles and flammable ground materials *Remove all ladder fuels. *Min 10 feet between stems of native trees or "clumps", (max 5 feet trees/clump). *Crowns of stems or between "clumps" do not touch. *10-15 feet between planting islands & groups of shrubs.	*Maintain low combustible ground covers. *Keep lawns watered, (as conditions allow). *Consider planting beds, rock gardens, xeriscaping and fire resistant plants. *Use bedding plants (<18" high). *Consider non-flammable landscape material. * Prune native tree limbs min 8 feet from ground or 25% of tree height, which ever is less.	The goal in this zone is to reduce radiant heat and short-range spotting.
From 50 feet to property boundary	*Max densities for native trees per Flagstaff Fire Department approval. *Remove all ladder fuels. *15 feet between stems of native trees or "clumps" (max 5 trees/clump) *20 feet between planting islands.	*Consider coordination with neighboring properties. * Prune native tree limbs min 8 feet from ground or 25% of tree height, which ever is less. *Store firewood and other combustibles in this Zone.	Treatment in this zone will create conditions unfavorable to crown fire.

Visit our website at www.flagstaff.az.gov/fuelmanagement

For assistance, contact Fuel Management Program at: (928)-779-7685 ext. 283 or 333

- fuelmanagemet@ci.flagstaff.az.us